

sunways

Grid-connected PV Inverter
Single Phase Dual MPPT

User Manual

STS-3K/3.6K/4.2K/4.6K/5K/6KTL

CONTENTS

1. Preface.....	5
1.1 Overview.....	5
1.2 Target Groups.....	5
2. Safety Instructions.....	5
2.1 Safety Notes	5
2.2 Statement.....	5
2.3 Important Safety Matters	6
2.4 Symbols Explanation.....	7
3. Product Description	9
3.1 Basic Features	9
3.2 Physical Layout.....	10
3.3 Display Interface	12
3.4 Packing List.....	13
4. Installation.....	13
4.1 Location.....	13
4.2 Mounting	15
4.3 Electrical Connection	17
4.4 Monitoring Device Installation.....	22
4.5 CT/RS485/DRED Connection	23
4.6 System Layout of Units without Integrated DC Switch.....	26
5. Start and Stop	27
5.1 Start the Inverter.....	27
5.2 Stop the Inverter	27
6. General Operation.....	28
6.1 Display Operation	28
6.2 Auto-Test.....	29
6.3 AC Output Boost for STS-5KTL Inverter.....	30
6.4 Power Quality Response Modes	30
6.5 Country Code (Safety Code) Setting.....	30
6.6 Online Monitoring APP	30
7. Troubleshooting.....	31
7.1 Error Message.....	31
7.2 Maintenance.....	32
8. Technical Parameters	33

Attention

The products, services or features purchased are subject to the commercial contracts and terms of Sunways technologies Co., Ltd. All or part of the products, services or features described in this document may not be within purchased. Unless otherwise agreed in the contract, the Company shall not make any express or implied declaration or guarantee of the contents of this document.

Due to product version upgrades or other reasons, the contents of this document will be updated periodically. Unless otherwise agreed, this document serves only as a guide to use, and all statements, information and recommendations in this document do not constitute any express or implied guarantee.

Manufacturer: Sunways Technologies Co., Ltd.

Address: No. 1, Second Road, Green Industrial Zone, Chongshou Town,
Cixi City, ZheJiang Province, PEOPLE'S REPUBLIC OF CHINA

Website: www.sunways-tech.com

Service Mail: service@sunways-tech.com

Hotline: +86 400-9922-958



1. Preface

1.1 Overview

This manual is an integral part of Sunways STS 3-6kW series single-phase inverters (hereinafter referred to as the inverter). It mainly introduces the assembly, installation, electrical connection, maintenance and troubleshooting of the products. Before installing and using the inverter, please read this manual carefully, understand the safety information and be familiar with the functions and characteristics of the inverter.

1.2 Target Groups

This manual is applicable to the electrical installers with professional qualifications and end-users. If there are any problems in the installation process, please call Sunways service telephone at [+86 400-9922-958](tel:+864009922958) or email Sunways at service@sunways-tech.com for consultation.

2. Safety Instructions

2.1 Safety Notes

2.1.1 Before installation, please read this manual carefully and follow the instructions in this manual strictly.

2.1.2 Installers need to undergo professional training or obtain electrical related professional qualification certificates.

2.1.3 When installing, do not open the front cover of the inverter. Apart from performing work at the wiring terminal (as instructed in this manual), touching or changing components without authorization may cause injury to people, damage to inverters and annulment of the warranty.

2.1.4 All electrical installations must conform to local electrical safety standards.

2.1.5 If the inverter needs maintenance, please contact the local designated personnel for system installation and maintenance.

2.1.6 To use this grid-connected inverter for power generation needs the permission of the local power supply authority.

2.1.7 The temperature of some parts of the inverter may exceed 60° C during operation. To avoid being burnt do not touch the inverter during operation. Let it cool before touching it.

2.1.8 When exposed to sunlight, the PV array generates dangerous high DC voltage. Please operate according to our instructions, or it will result in danger to life.






2.2 Statement

Sunways Technologies Co., Ltd. has the right not to undertake quality assurance in any of the following circumstances:

- 2.2.1 Damages caused by improper transportation.
- 2.2.2 Damages caused by incorrect storage, installation or use.
- 2.2.3 Damages caused by installation and use of equipment by non-professionals or untrained personnel.
- 2.2.4 Damages caused by failure to comply with the instructions and safety warnings in this document.
- 2.2.5 Damages of running in an environment that does not meet the requirements stated in this document.
- 2.2.6 Damages caused by operation beyond the parameters specified in applicable technical specifications.
- 2.2.7 Damages caused by unauthorized disassembly, alteration of products or modification of software codes.
- 2.2.8 Damages caused by abnormal natural environment (force majeure, such as lightning, earthquake, fire, storm, etc.).
- 2.2.9 Any damages caused by the process of installation and operation which don't follow the local standards and regulations.
- 2.2.10 Products beyond the warranty period.

2.3 Important Safety Matters




Table below shows the symbols that may appear in this document and their definition:

Symbol	Description
 Danger	Dangerous situation, if not avoided, it could result in death or serious personal injury.
 Warning	Potentially dangerous situation, if not avoided, may result in death or serious personal injury.
 Caution	Potentially dangerous situation, if not avoided, may result in moderate or minor personal injury.
 Attention	The safety warning information about equipment or environment, to prevent equipment damage, data loss, equipment performance degradation or other unpredictable results.
 Note	Symbol highlights important information, best practices and tips, etc.










2.4 Symbols Explanation

This chapter mainly elaborates the symbols displayed on the inverter, nameplate and packing box.





2.4.1 Symbols on the Inverter

Symbol	Description
	Inverter status indicator.
	Inverter running indicator.
	Grounding symbol, the inverter casing needs to be properly grounded.

2.4.2 Symbol on the Inverter nameplate

Symbol	Description
	The inverter cannot be disposed of with household waste.
	Please read the instructions carefully before installation.
	Do not touch any internal parts of the inverter until 5 min after being disconnected from the mains and PV input.
	CE mark, the inverter complies with the requirements of the applicable CE guidelines.
	TUV certification.
	SAA certification.
	Danger. Risk of electric shock!
	The surface is hot during operation and no touch is allowed.
	Electric shock hazard, live parts, risk of electric shock, do not touch.

2.4.3 Symbol on the Packing box

Symbol	Description
	Handle with care.
	This side up.
	Keep dry.
	Stacked layers.

3. Product Description

3.1 Basic Features

3.1.1 Function

The Sunways STS 3~6kW series inverter is a single-phase grid-connected PV inverter which used to efficiently convert the DC power generated by the PV string into AC power and feed it into the grid.

3.1.2 The STS 3~6kW series inverter includes 6 models which are listed below:

STS-3KTL, STS-3.6KTL, STS-4.2KTL, STS-4.6KTL, STS-5KTL, STS-6KTL

3.1.3 Applicable grid type

The applicable grid types for the Sunways STS 3~6kW series are TN-S, TN-C, TN-C-S and TT. When applied to the TT grid, the voltage of N to PE should be less than 30V. For more details please see Figure 3-1:

3.1.4 Storage conditions

- 1) Inverter must be stored in its original packaging.
- 2) The storage temperature and humidity should be in the range of -30 °C and + 60 °C, and less than 90%, respectively.
- 3) If a batch of inverters needs to be stored, the height of each pile should be no more than 6 levels.

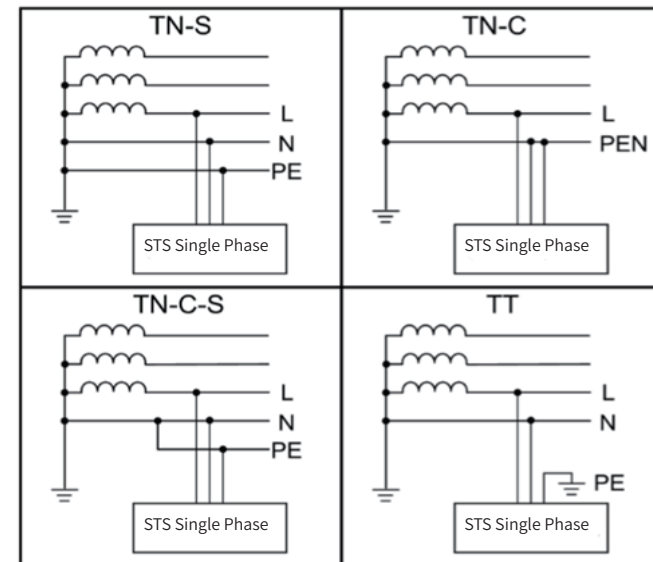


Figure 3-1 Applicable grid types

3.2 Physical Layout

3.2.1 Inverter front view:

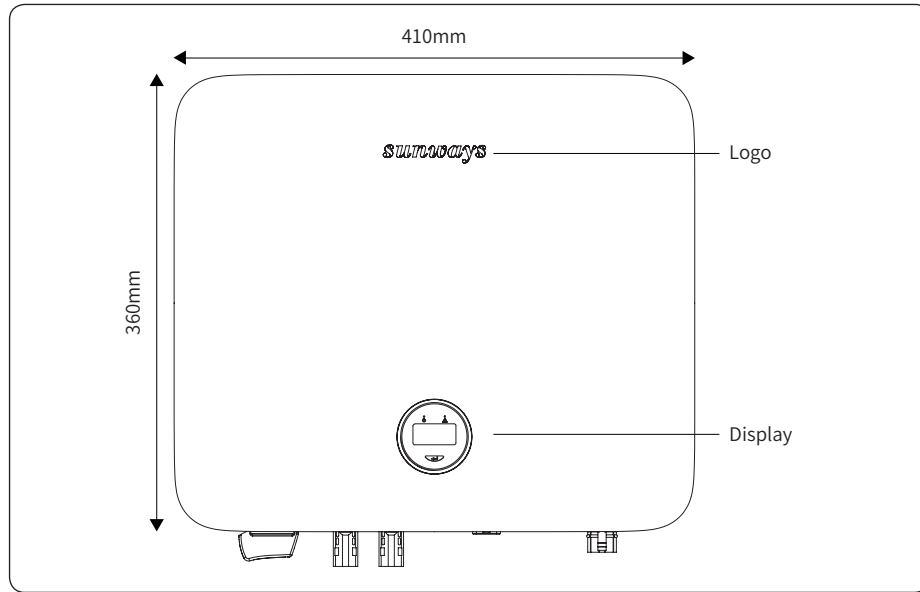


Figure 3-2 Front view

3.2.2 Inverter side view:

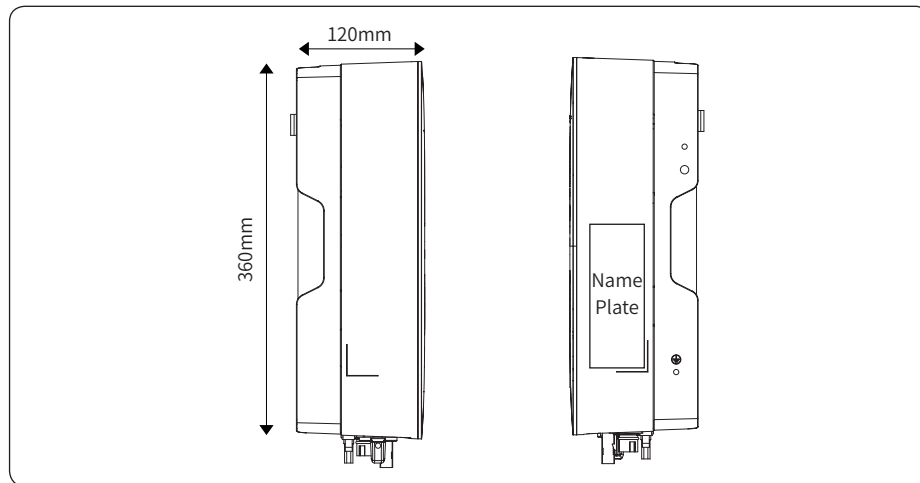


Figure 3-3 Side view

3.2.3 Inverter bottom view:

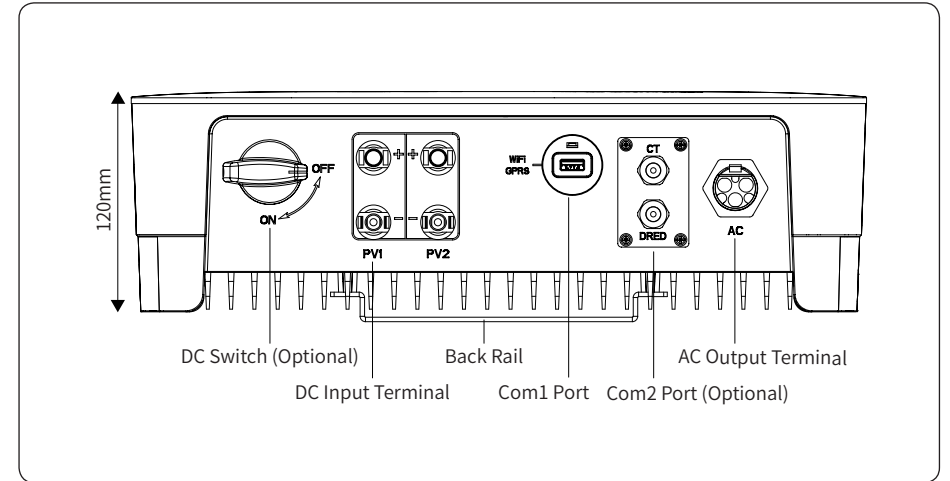


Figure 3-4 Bottom view

3.2.4 Inverter back view:

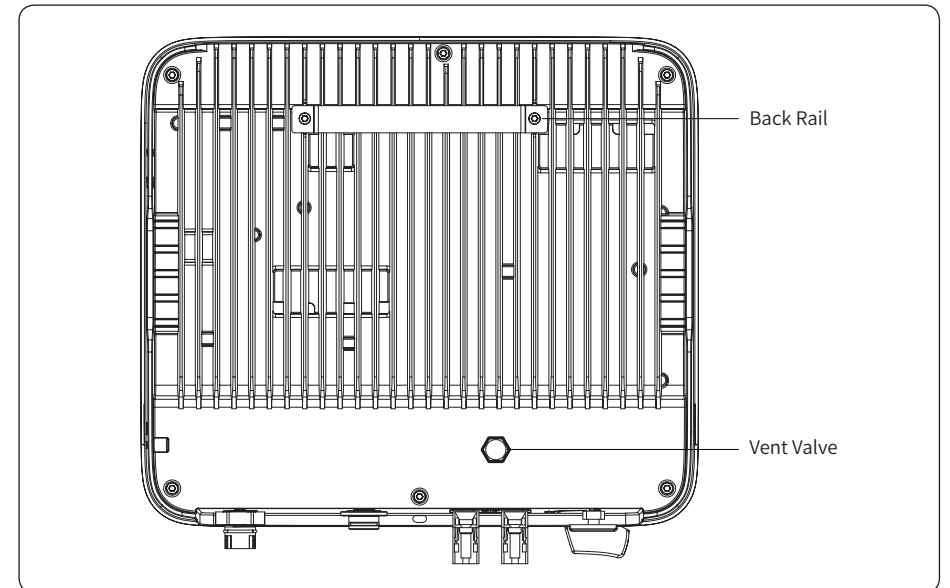


Figure 3-5 Inverter back view

3.3 Display Interface

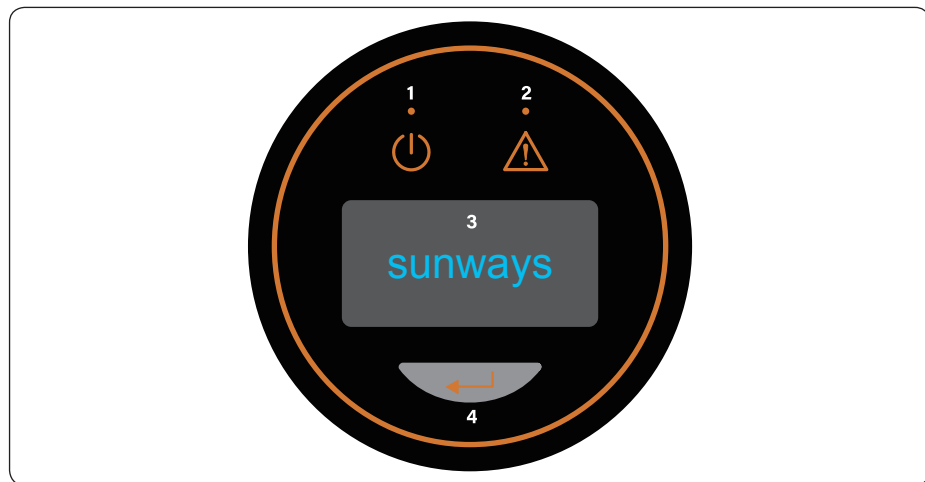


Figure 3-6 Display interface

Item	Indicator	Status	Description
1	Power Indicator	Off	No input voltage detected or input voltage is too low.
		Slow flashing	Inverter powered on, waiting for the grid connection.
		Quick flashing	Inverter detected grid power and entered self-test status.
		On	Normal, grid-connected and power generated.
2	Alarm Indicator	On	An alarm or fault is detected, specific fault information can be viewed from the display.
		Off	The inverter is running normally.
		Slow flashing	The monitoring device is not connected to the router or is not connected to internet.
		Quick flashing	The monitoring device is connected to the router or connected to internet but not connected to the server.
3	OLED Display	On	Display the inverter operating information.
		Off	If the button pressed without any response, the screen is faulty or not well connected.
4	Button	Physical button	Switch OLED display information and set parameters by short press and long press.

3.4 Packing List

The package of the inverter includes the following accessories. Please check whether the accessories in the packing box are complete when receiving the goods. See Figure 3-7 for the packing list:

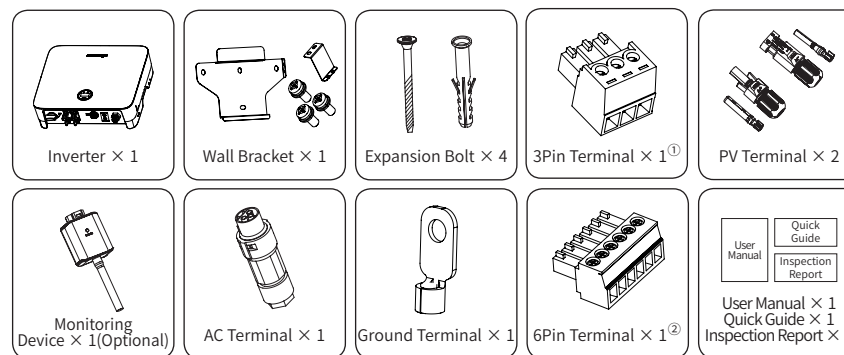


Figure 3-7 Packing list

Note	①	Export limitation & control version 2pcs; RS485 and DRED version 1pcs (This connector already pre-installed inside the inverter).
	②	DRED version only (This connector already pre-installed inside the inverter).

4. Installation

4.1 Location


The Sunways STS 3~6kW series inverter is designed with IP65 protection enclosure for indoor and outdoor installations. When selecting an inverter installation location, the following factors should be considered:

- 1) The wall on which the inverter is mounted must be able to withstand the weight of the inverter.
- 2) The inverter needs to be installed in a well-ventilated environment.
- 3) Do not expose the inverter directly to strong sunlight to prevent excessive temperature operation. The inverter should be installed in a place with shelter to prevent direct exposure to sunlight and rain.
- 4) Install the inverter at eye level for easy inspection of screen data and further maintenance.
- 5) The ambient temperature of the inverter installation location should be between -30 °C and 60 °C.
- 6) The surface temperature of the inverter may reach up to 75 °C. To avoid risk of burns, do not touch the inverter while it's operating and inverter must be installed out of reaching of children.

4.1.1 Recommended installation location of the inverter, as shown in Figure 4-1:



Figure 4-1 Recommended installation location

	<p>Warning Do not put flammable and explosive articles around the inverter.</p>
---	--

4.1.2 The requirements for inverter installation spacing are shown in Figure 4-2:

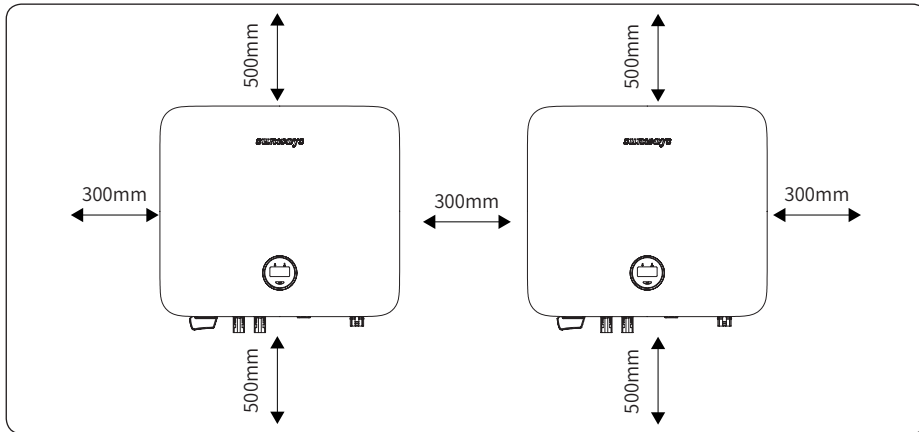


Figure 4-2 Recommended installation spacing

4.1.3 The installation angle of the inverter is recommended as shown in Figure 4-3:

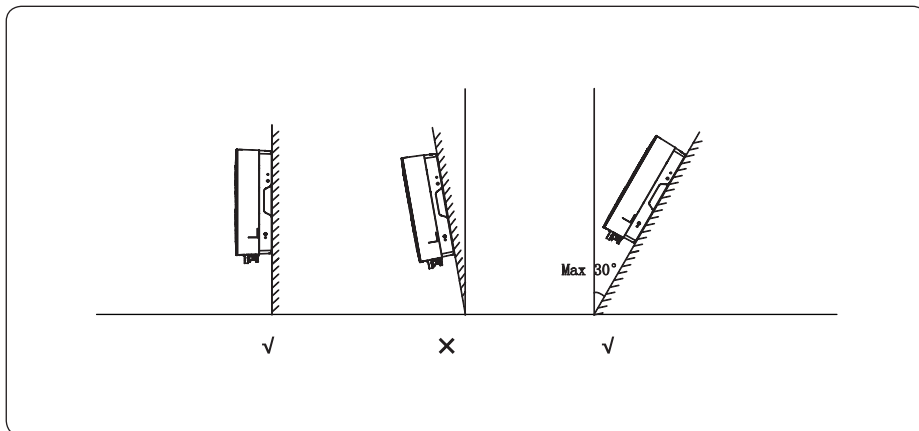


Figure 4-3 Recommended installation angle

4.2 Mounting

4.2.1 Wall bracket installation

Dimensions of wall bracket, see Figure 4-4:

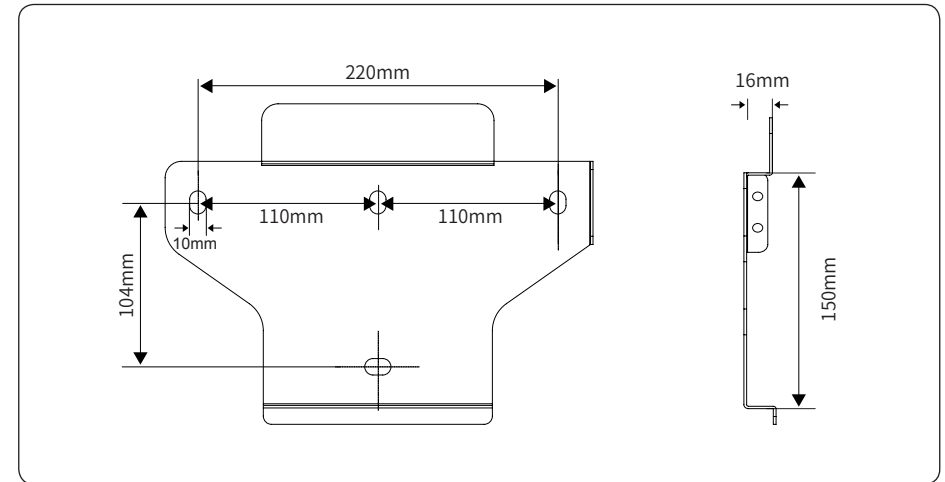


Figure 4-4 Dimensions of wall bracket

1) Use the wall bracket as the template to mark the position of 4 holes on the wall. See Figure 4-5 for details:

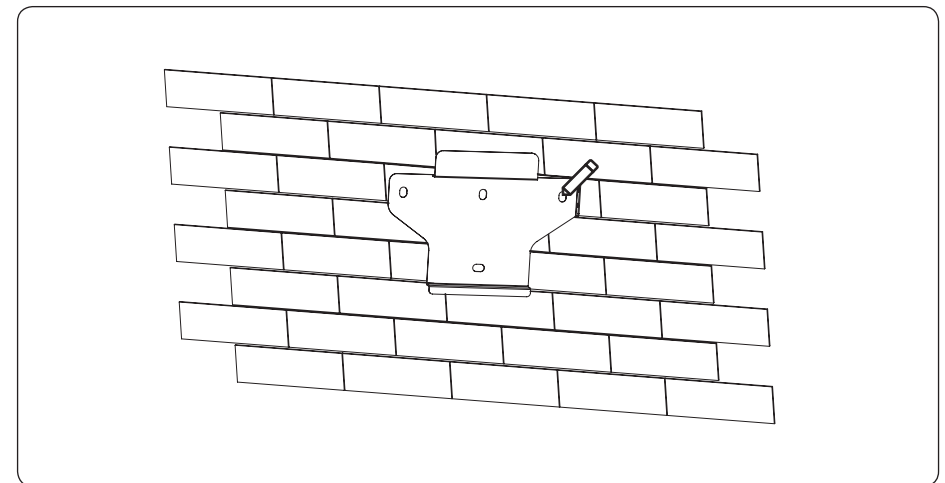


Figure 4-5 Marking hole position using installation bracket

2) Bracket assembly

Prepare the two M5 screws and Z-shaped plate in the accessory bag, then fix the Z-shaped plate to the mounting bracket.

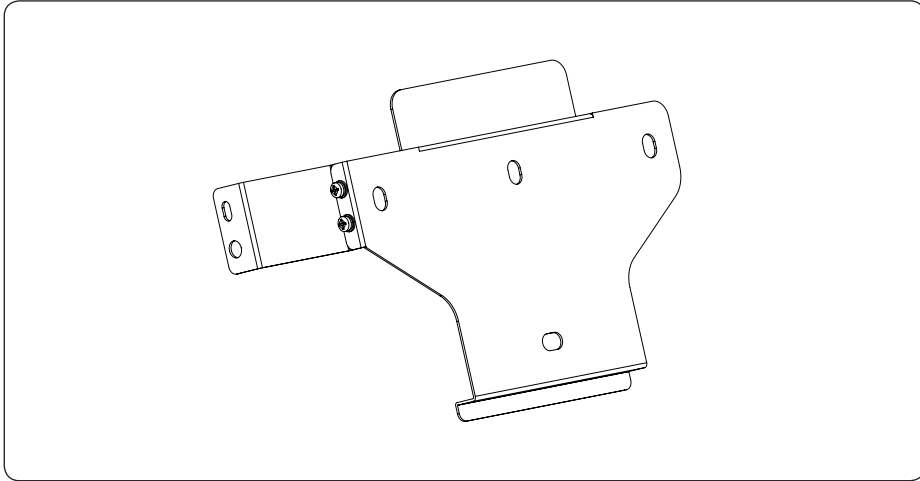



Figure 4-6 Bracket assembly

3) Use an electrical driller with 10mm diameter bit to drill 4 holes in the wall with 80 mm depth.

	<p>Warning Before drilling, make sure to avoid any buried water tube and electric wires in the wall.</p>
---	---

4) Insert the expansion tubes into the holes and tighten them, then fix the bracket onto the wall with expansion screws by using a cross screwdriver, as shown in Figure 4-7:

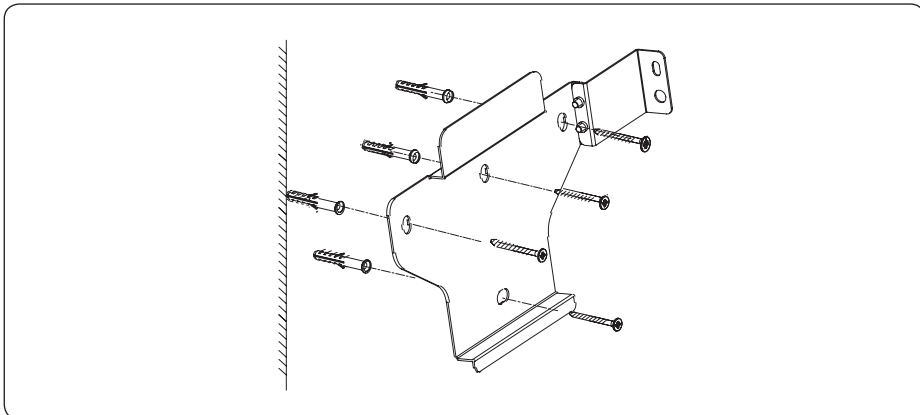


Figure 4-7 Fixing the wall bracket

4.2.2 Mounting the inverter

Lift up the inverter, hang the back rail on the fixed wall bracket carefully. Screws the inverter to the Z-shaped plate (The lock is purchased separately). See Figure 4-8 for details:

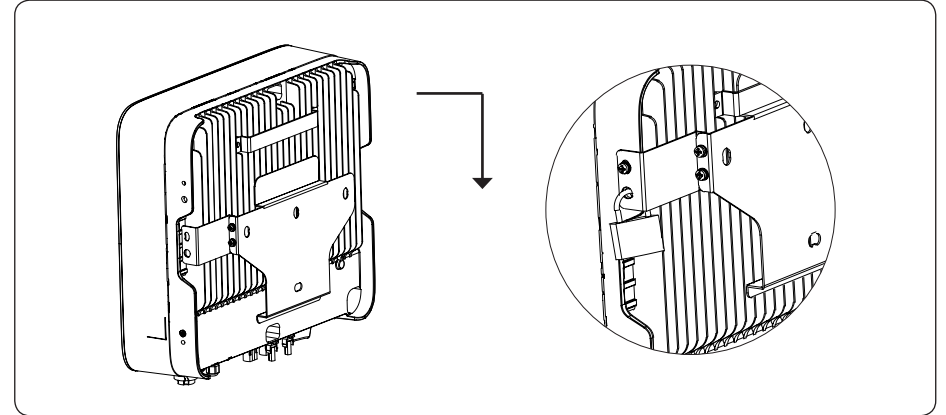







Figure 4-8 Mounting the inverter

4.3 Electrical Connection

	<p>Danger A high voltage in the conductive part of the inverter may cause an electric shock. When installing the inverter, make sure that the AC and DC sides of the inverter are completely de-energized.</p>
	<p>Warning Do not ground the positive or negative pole of the PV string, otherwise it will cause serious damage to the inverter.</p>
	<p>Warning Static may cause damage to the electronic components of the inverter. Anti-static measures should be taken during installation and maintenance.</p>
	<p>Attention Do not use other brands or other types of terminals other than the terminals in the accessory package. Sunways has the right to refuse all damages caused by the mixed-use of terminals.</p>
	<p>Attention Moisture and dust can damage the inverter, ensure the cable gland is securely tightened during installation. The warranty claim will be invalidated if the inverter is damaged as a result of a poorly connected cable connector.</p>

4.3.1 Inverter PV string connection

4.3.1.1 The following must be considered when making electrical connections to the inverter:

- 1) Disconnect the AC breaker switch on the grid side.
- 2) The DC switch of the inverter must be turned to the "OFF" position.
- 3) For best practice, ensure PV modules of the same model and specifications are connected in each string.

4) Make sure the maximum output voltage of each PV string does not exceed 600V.

4.3.1.2 DC connector assembly procedure

1) Select the appropriate photovoltaic cable:

Cable type	Traverse area (mm ²)	
	Range (mm ²)	Recommended value (mm ²)
General photovoltaic cable	2.5-4.0	4.0

2) Peel off the DC cable insulation sleeve for 7 mm, as shown in Figure 4-9:

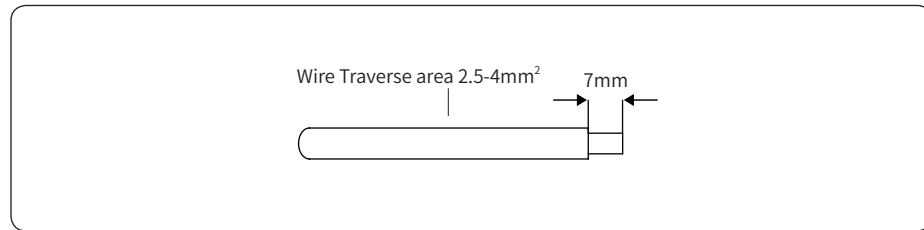


Figure 4-9

3) Disassemble the connector in the accessory bag, as shown in Figure 4-10:

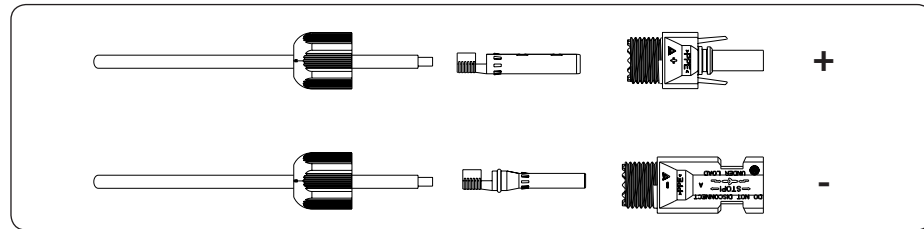


Figure 4-10

4) Insert the DC cable through the DC connector nut into the metal terminal and press the terminal with a professional crimping plier (pull back the cable with some power to check if the terminal is well connected to the cable), as shown in Figure 4-11:

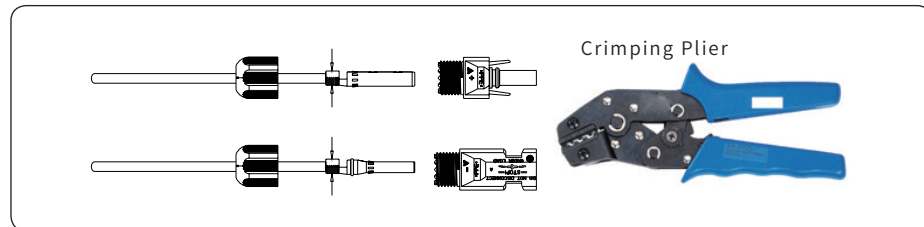


Figure 4-11

5) Insert the positive and negative cables into the corresponding positive and negative connectors, pull back the DC cable to ensure that the terminal is tightly attached in the connector.

6) Use an open-end wrench to screw the nut to the end to ensure that the terminal is well sealed, as shown in Figure 4-12:

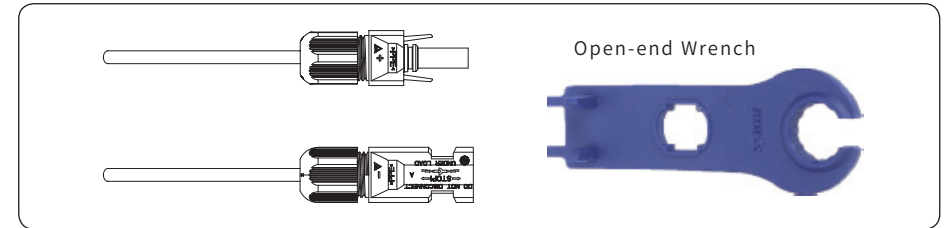


Figure 4-12



Warning

1. Before assembling the DC connector, make sure that the cable polarity is correct.
2. Use a multimeter to measure the voltage of the DC input string, verify the polarity of the DC input cable, and ensure that each string voltage is within 600V.

7) Insert the positive and negative connectors into the inverter DC input terminals respectively, a click sound should be heard if the terminals are well connected, as shown in Figure 4-13:

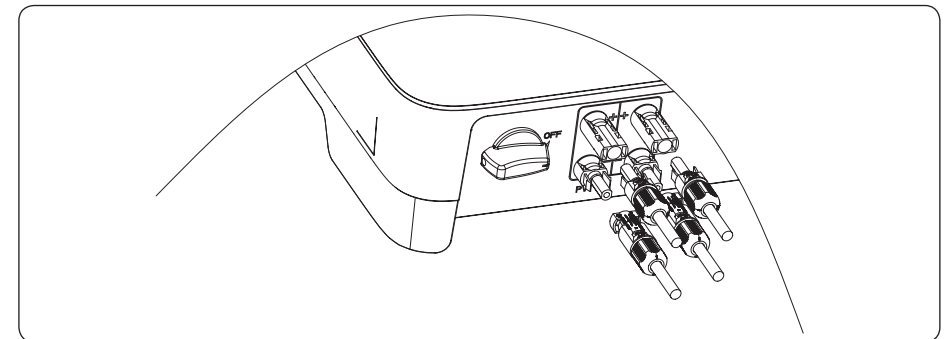


Figure 4-13

8) Seal the unused PV terminals with the terminal caps.

4.3.2 Connection of AC output

The Sunways STS 3~6kW series single phase inverter operates with grid voltage and frequency of 220/230V and 50/60Hz, respectively.

This inverter includes an integrated residual current device (RCD).

If an external residual current device (RCD) is used, a device of type (A/AC etc) should be used, with a tripping current of 300mA or higher.

The recommended cable and AC switch for the Sunways STS 3~6kW series single phase inverter are shown in the following table:

Model	STS-3KTL	STS-3.6KTL	STS-4.2KTL	STS-4.6KTL	STS-5KTL	STS-6KTL
Cable	4mm ²	4mm ²	4mm ²	4mm ²	6mm ²	6mm ²
Breaker	20A	25A	32A	32A	40A	40A



Warning

An AC breaker must be connected on the AC side of the inverter. Any loads cannot be connected to the inverter without the AC breaker.

4.3.2.1 AC connector connection steps

1) Take the AC connector out of the accessory bag and disassemble it, as shown in Figure 4-14:

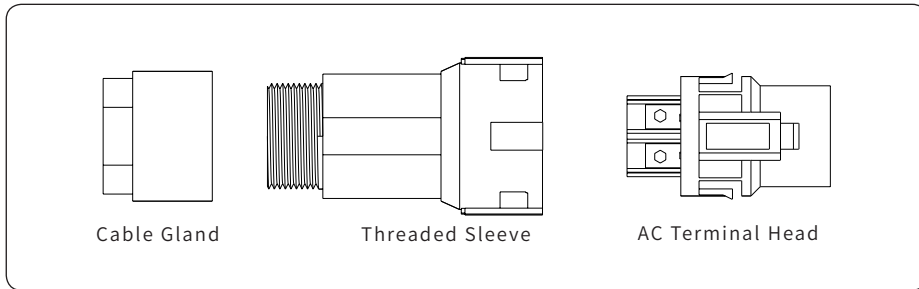


Figure 4-14

2) According to the table above, select an appropriate cable, peel the insulation sleeve of AC cable off for 50mm, and peel off the end of L /PE / N wires for 8mm, as shown in Figure 4-15:

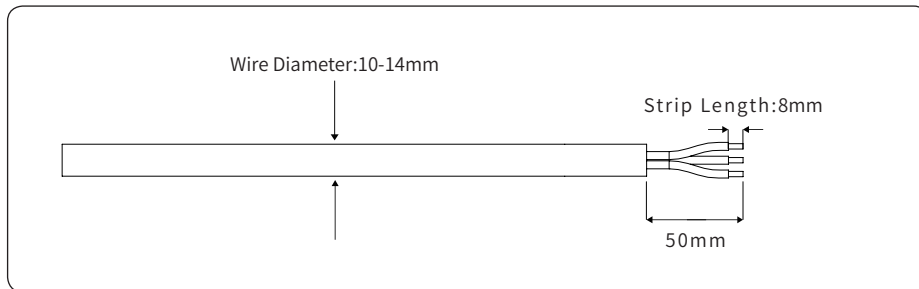


Figure 4-15

3) Insert the stripped end of each three wire into the appropriate hole of the terminal head (yellow green wire to PE port, red or brown wire to L port, and blue or black wire to the N port). Please try to pull out the cable to make sure it is well connected. As shown in Figure 4-16:

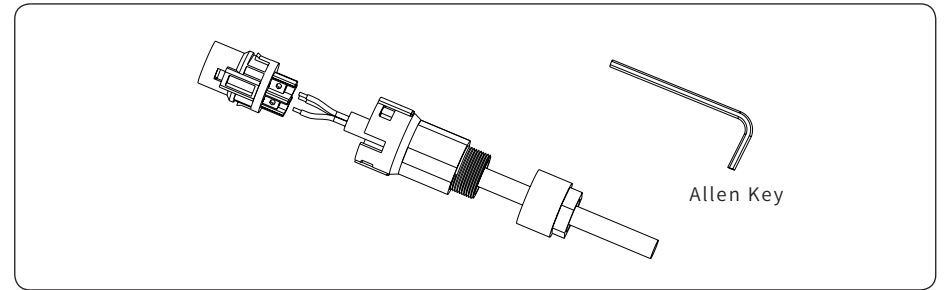


Figure 4-16

4) According to the arrow direction push the threaded sleeve to make it connected with the AC terminal head and then rotate the cable gland clockwise to lock it, as shown in figure 4-17:

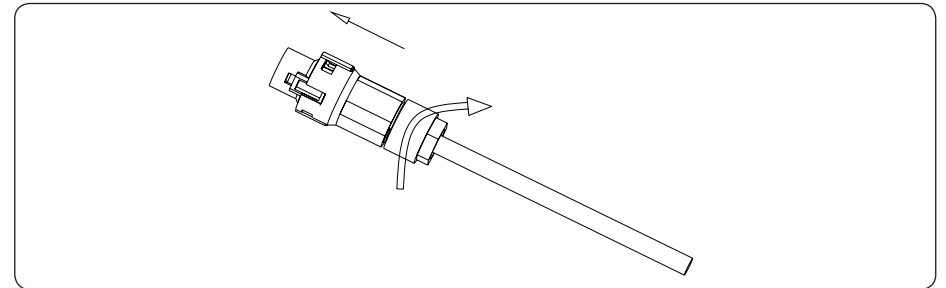


Figure 4-17

5) Connect the AC connector to the inverter AC terminal, and the slight click shows that the connection is in the place. As shown in figure 4-18:

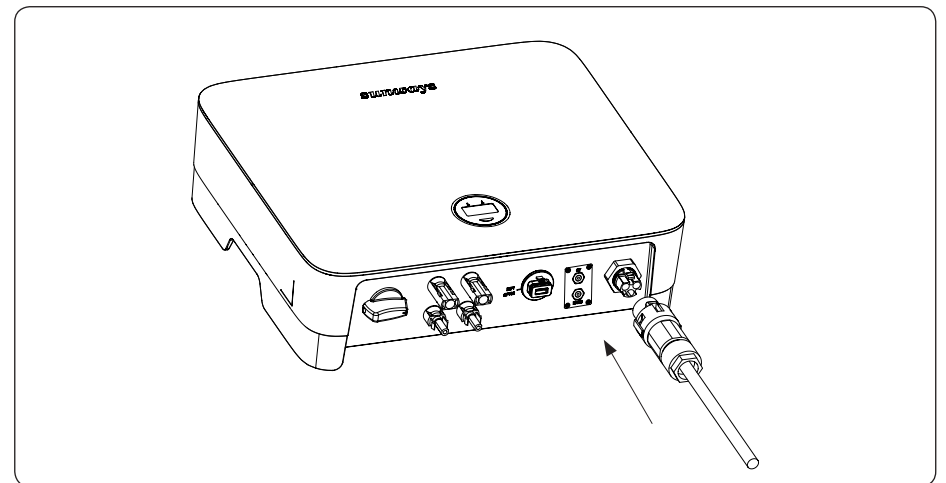




Figure 4-18 Connect the AC connector

4.3.3 External ground connection

 Danger	Do not connect the N-wire as a protective ground wire to the inverter casing. Otherwise, it may cause electric shock.
 Attention	Good grounding is good for resisting surge voltage shock and improving EMI performance. Inverters must be well-grounded. For a system with only one inverter, the PE cable needs to be grounded. For a multi-inverter system, all inverters PE wires need to be connected to the same grounding copper bar to ensure equipotential bonding.

Ground terminal connection steps:

- 1) The external grounding terminal is located in the lower right side of the inverter.
- 2) Fix the grounding terminal to the PE wire with a proper tool and lock the grounding terminal to the grounding hole in the lower right side of the inverter, as shown in Figure 4-19.
- 3) The cross-sectional area of the external grounding cable is 4mm².

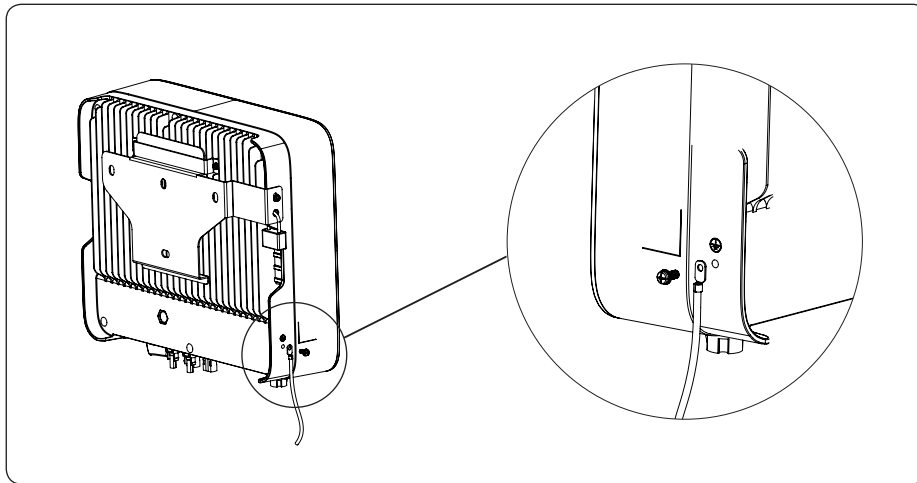


Figure 4-19 Grounding terminal connection

4.4 Monitoring Device Installation

Sunways STS 3~6kW series single phase inverter supports WiFi, GPRS, LAN and RS485 communication.

Plug the WiFi, LAN or GPRS module into the COM1 port in the bottom of inverter (as shown in Figure 4-20). A slight “click” sound during the installation represents that the assembly is in place.

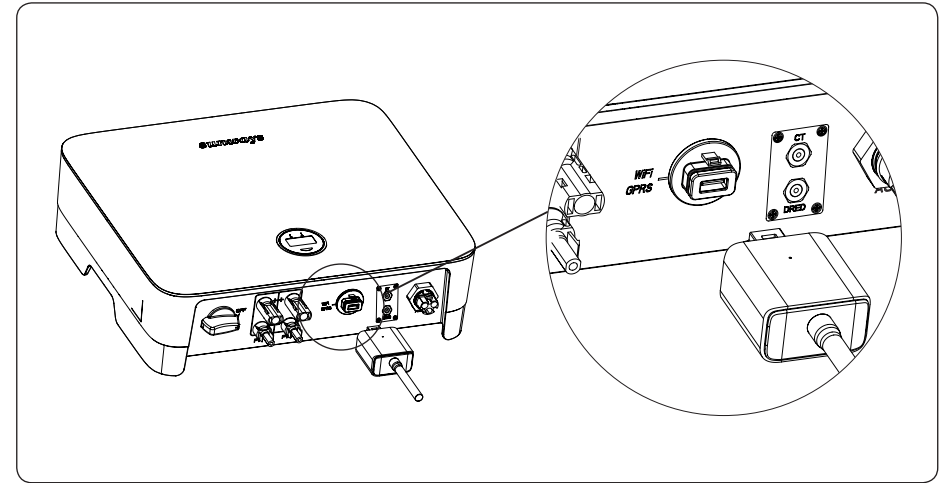




Figure 4-20 Monitoring device installation

 Note	1.The GPRS and LAN version module does not need to be configured. 2.The WiFi version module needs to be configured to the router for the first installation. If the router name or password are changed, the WiFi dongle will need to be reconfigured. For details, please refer to the [QUICK INSTALLATION GUIDE] which is attached to the accessory bag.
 Attention	Do not touch the waterproof plug in the card slot except for replacing the SIM card. In that case, please make sure the card slot is completely sealed by the weatherproof plug after replacing the SIM card. Any damages caused by improper waterproof plug placement, will void warranty.

4.5 CT/RS485/DRED Connection

4.5.1 Terminals definition

Inverter communication ports are located at the behind of the CT/DRED plate at the bottom and include CT port, RS485 port (used for Datalogger connection), and DRED port, as shown in Figure 4-21:

Note	Port 1	Port 2	Port 3
	CT Port	RS485 Ports	DRED Port

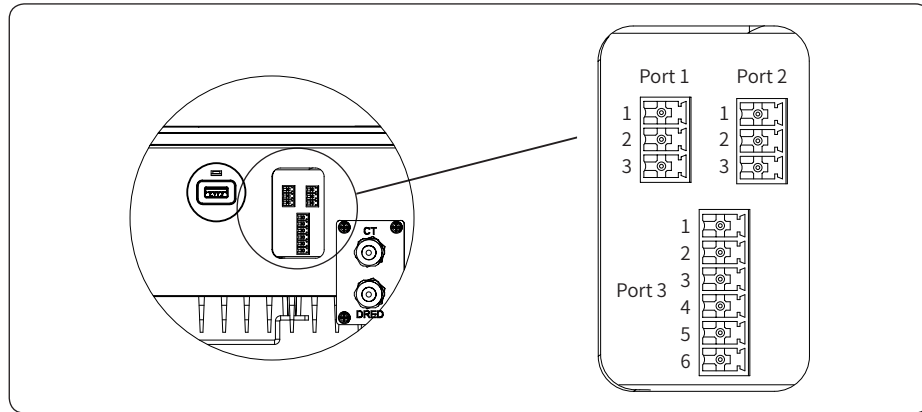



Figure 4-21

 Note	<p>1.This port is available on export limitation & control, RS485 and DRED versions of the inverter only.</p> <p>2.The Pin connector in inverter Port1 and Port2 may vary from 2Pin to 3pin according to the shipment version.</p>
---	--

Different versions of the inverter have different terminals, which are defined as follows:

Port	Function	NO.	Definition
Port 1	<p>1.Only Export limitation & control version with this port.</p> <p>2.Connect external CT to activate the Export Limitation&control function of Sunways STS series inverter.</p> <p>3.The color of CT is only identified by Sunways.</p>	1	Connect S1 cable (Black CT) or white black cable (Blue CT)
		2	Connect S2 cable (Black CT) or black cable (Blue CT)
		3	NULL
Port 2	<p>1.Export limitation & control/RS485/DRED version with this port.</p> <p>2.In case of multiple inverters, all the inverters can be daisy-chained via RS485 cables.</p>	1	RS485 A
		2	RS485 B
		3	PE/NULL
Port 3	<p>1.Only DRED version with this port.</p> <p>2.DRED means demand response enable device. The AS/NZS 4777.2:2015 requires inverters to support demand response mode (DRM). This function is for inverters that comply with AS/ NZS4777.2:2015 standard.</p> <p>3.Sunways inverter is fully compliant with all DRM. The 6pin connector is used for DRM connection.</p> <p>4.Support DRM command: DRM0, DRM5, DRM6, DRM7, DRM8.</p>	1	COM/DRMO
		2	REFGEN
		3	DRM4/8
		4	DRM3/7
		5	DRM2/6
		6	DRM1/5

4.5.2 RS485 Communication

STS series single-phase inverter supports multiple inverters daisy-chain connection to a data logger via RS485 communication.

Multiple inverters connection diagram as shown in Figure 4-22:

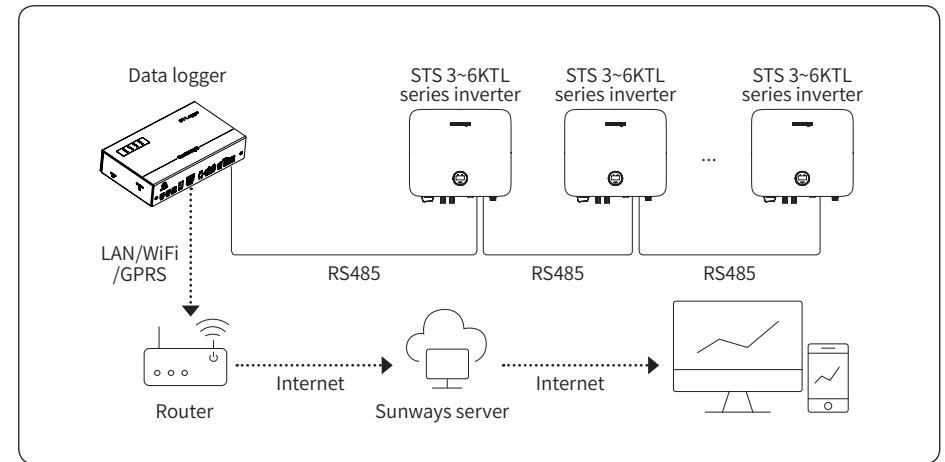



Figure 4-22

The maximum distance between the inverter at the end of the daisy chain and the Data logger should be within 1000m.

 Attention	<p>It is recommended to use the RS485 communication cable with a cross-sectional area of 0.75-1.5mm² and an outer diameter of 5mm-10mm. RS485 cable requirements: Shielded twisted-pair cable or shielded twisted Ethernet cable.</p>
--	--

4.5.3 Export limitation & control or power limit solution

Export limitation & control or power limit solution, wiring instructions and configuration, please contact Sunways after-sales at service@sunways-tech.com.

4.5.4 Wiring Steps:

- 1) Remove the CT/DRED plate in the bottom of the inverter with a cross screwdriver.
- 2) Put the cable through the connector and connect to the terminal in the following order: screw cap, sealing ring, insulator, metal plate, nut and 3/6pin connector, as shown in Figure 4-23:
- 3) Insert the cable to the port in the 3/6pin connector and fasten with a screwdriver.
- 4) Insert the 3/6pin connector into the 3/6pin connector inside the inverter, and screw the CT/DRED plate back with a cross screwdriver, as shown in Figure 4-24:

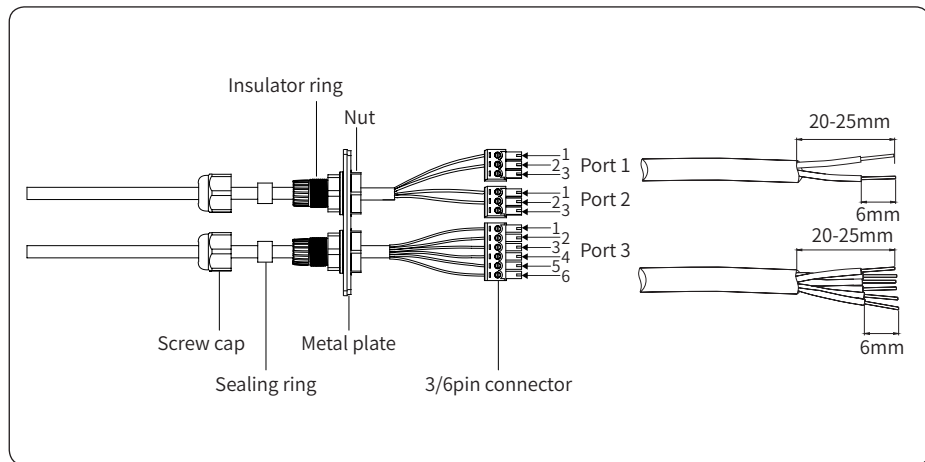


Figure 4-23

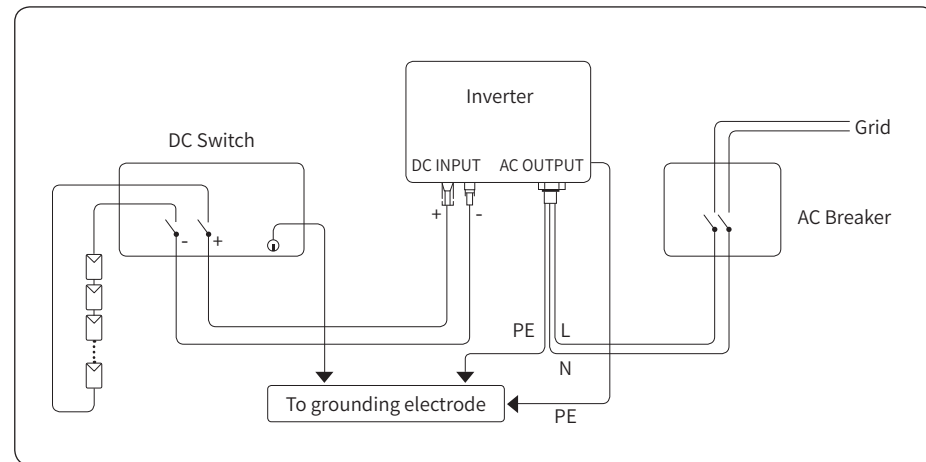


Figure 4-25

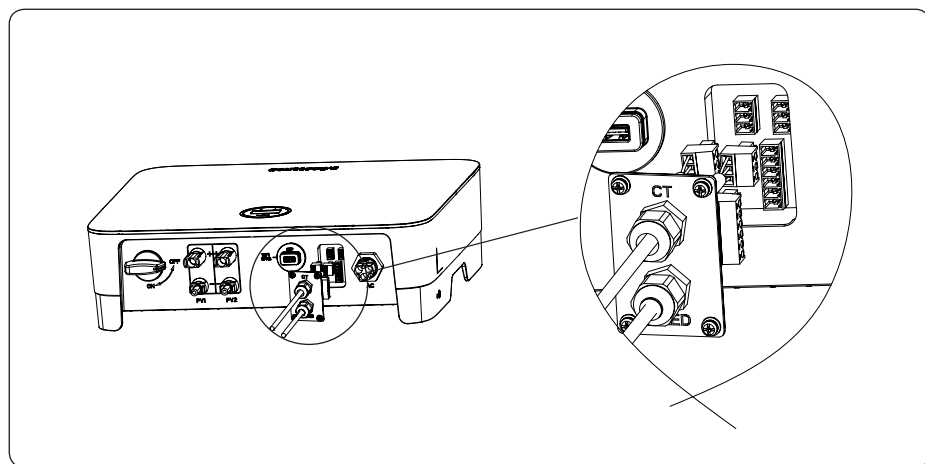


Figure 4-24

4.6 System Layout of Units without Integrated DC Switch

Local standards or codes may require that PV systems are fitted with an external DC switch on the DC side. The DC switch must be able to safely disconnect the open-circuit voltage of the PV array plus a safety reserve of 20%. Install a DC switch to each PV string to isolate the DC side of the inverter. We recommend the following electrical connection, as shown in Figure 4-25:

5. Start and Stop

5.1 Start the Inverter

When starting the inverter, follow these steps:

- 1) Turn on the AC breaker first (close the AC circuit breaker).
- 2) Turn on the DC switch in the bottom. If the PV string voltage higher than the inverter start-up voltage, the inverter will start.
- 3) When both AC and DC power supply are normal, the inverter is ready to start. The inverter will initiate checking its internal parameters and grid parameters, if it is within the range, the green light on the left side of the screen begins to flash, and the "Waiting" message will be displayed on the OLED display.
- 4) After self-checking completed, the inverter will start generating electricity, the green light will remain on, and the OLED display will display real-time power information.

5.2 Stop the Inverter


When turning off the inverter, please follow the steps below:

- 1) Turn off the AC breaker first.
- 2) Wait 30 seconds and then turn the DC switch to the "OFF" position. At this time, there is remaining power in the inverter capacitor. Wait for 5 minutes until the inverter is completely de-energized before conducting any work on the inverter.
- 3) Disconnect the AC and DC cables.

6. General Operation

6.1 Display Operation

When the inverter is turned on, the following interfaces will be displayed on the OLED display, and the OLED display allows the user to check various operation information and to modify the settings of the inverter. Please refer to the following display operation flow for details:

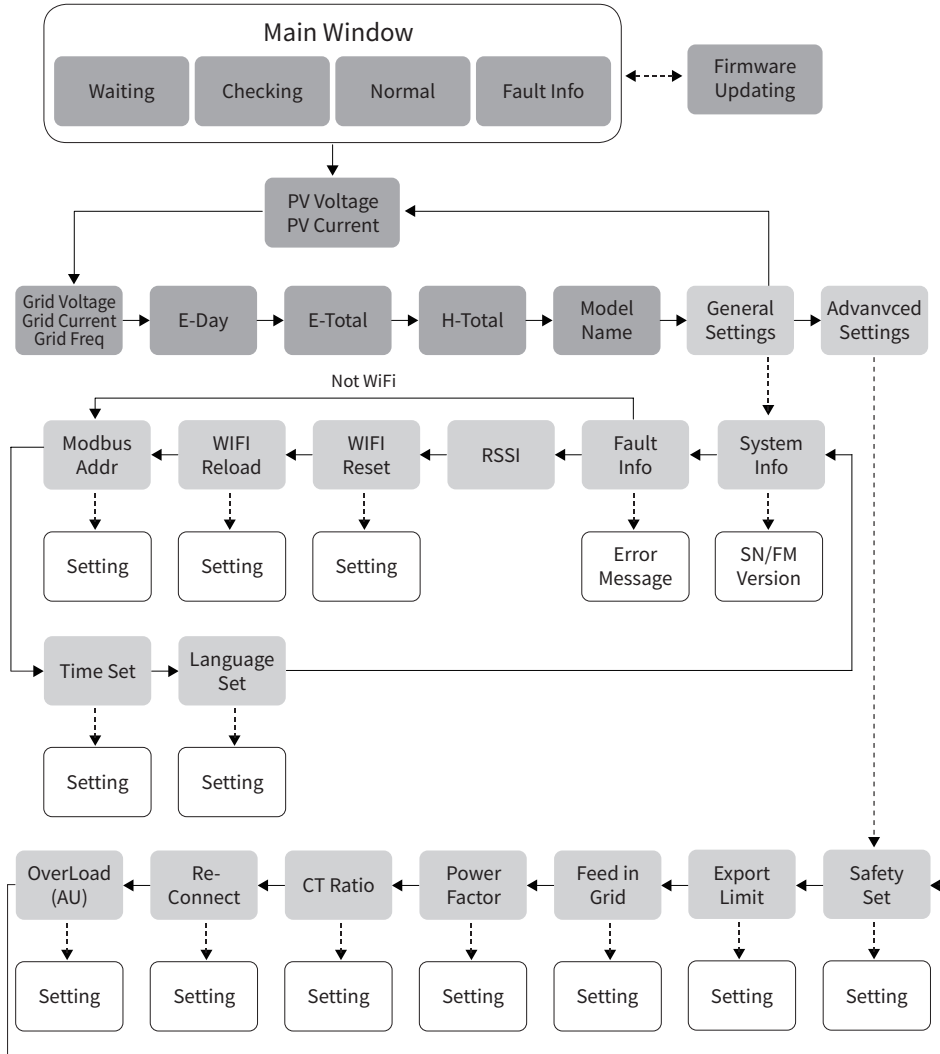

—> Short press(1s), switch window
> Long press(3s), enter the lower Menu

Tip: Please wait for 10 seconds and the inverter will automatically save your settings or modifications.


6.2 Auto-Test

This function is disabled by default, and will be only functional in the safety code of Italy. Short press the button several times until “Auto Test CEI 0-21” displays on the screen, press and hold the button 3 seconds to activate “Auto Test”. After the auto test is finished, short press the button several times until the screen displays “Auto Test Record”, and hold the button 3 seconds to check the test results.

The auto test type will be chosen from “Remote” and “Local” before starting the auto test. “Remote” is set as 1 by default, which only can be modified to “0” by sending an external command and “Local” is set to 0 by default, which can be modified to 1 through operating the button on the inverter. According to the requirements of the standard, the test has been divided into three modes:

- 1) “Remote” set as 1, “Local” set as 0, then the test order is 59.S1, 59.S2, 27.S1, 81>.S2, 81<.S2;
- 2) “Remote” set as 1, “Local” set as 1, then the test order is 59.S1, 59.S2, 27.S1, 81>.S1, 81<.S1;
- 3) “Remote” set as 0, “Local” set as 1, then the test order is 59.S1, 59.S2, 27.S1, 81>.S2, 81<.S2.


Connect the AC cable, auto test will start after the inverter connected to the grid, see the operation steps below:

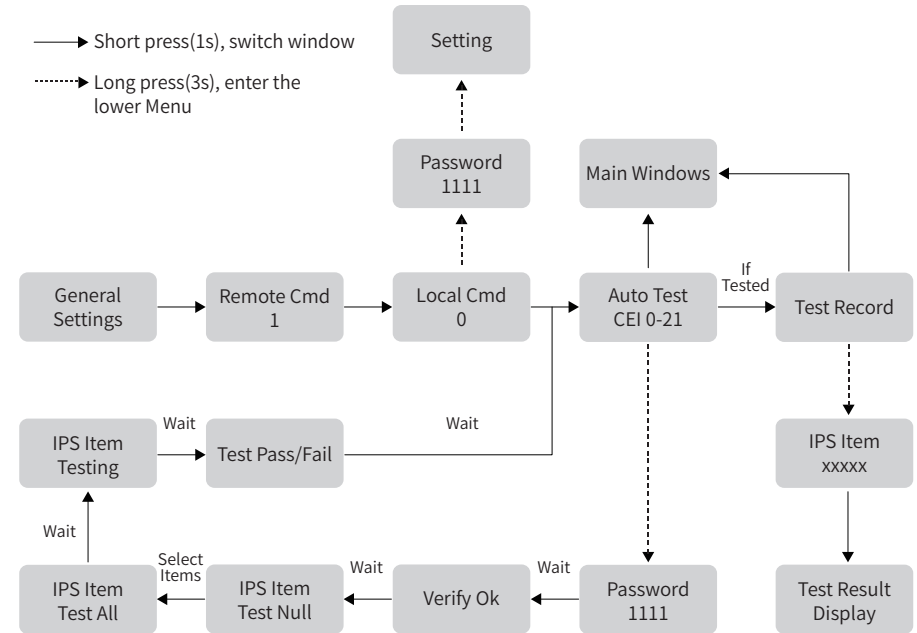


The auto test will start when the correct test item is selected, and the test result will be displayed on the screen when it finished. If the test was successful, it will display “Test Pass”, otherwise will display “Test Fail”. After each item tested, the inverter will reconnect to the grid and automatically start the next test according to the requirements of CEI 0-21.

6.3 AC Output Boost for STS-5KTL Inverter

The maximum output power of the residential single-phase solar system is 5kVA in most of the states in Australia. Check the local DNSPs or authorities if they allow AC output more than 5kVA.

 Note	<ol style="list-style-type: none"> Advanced settings can only be changed by qualified professionals with relevant certifications. Check requirements with local NSP before activating 10% AC output boost. Only STS - 5KTL has the option to enable/disable the 10% AC output boost. The default password to access the advanced settings is 1111, applicable to all on-grid inverters.
---	---

Please follow this flow chart to enable 10% AC output boost:

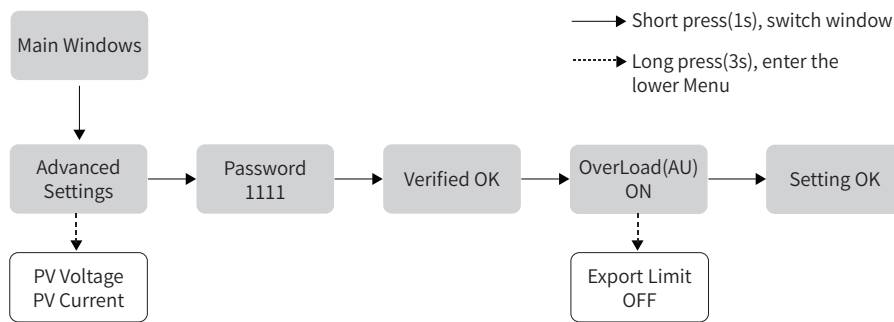

6.4 Power Quality Response Modes

6.4.1 Power derating for voltage variation (Volt-Watt mode)

This mode can be enabled via the configuration software. Please contact Sunways Technical Support at service@sunways-tech.com for more information.

6.4.2 Reactive power regulation for voltage variation (Volt-VAr mode)

This mode can be enabled via the configuration software. Please contact Sunways Technical Support at service@sunways-tech.com for more information.

6.5 Country Code (Safety Code) Setting

Please set "Country code (Safety code)" under the menu "Safety Set" in "Advanced Settings".

6.6 Online Monitoring APP

Customers can check their inverters real-time power, warnings and status through the App "SunwaysHome" anytime anywhere.

7. Troubleshooting





7.1 Error Message

Sunways STS 3~6kW series single phase inverter is designed in accordance with grid operation standards, and conform to the requirements of safety and EMC. The inverter had passed a series of rigorous tests to ensure it runs sustainably and reliably before shipment.

When a fault occurs, the corresponding error message will be shown on the OLED display, and in this case, the inverter might stop feeding into grid. The fault messages and their corresponding troubleshooting methods are listed below:

Error Message	Troubleshooting
No Display	<ol style="list-style-type: none"> Check whether cables are all firmly connected and DC switch is on. Check whether the input voltage meets the working voltage.
Mains Lost	<ol style="list-style-type: none"> Check whether the mains supply is lost. Check whether the AC breaker and terminals are well connected.
Grid Voltage Fault	<ol style="list-style-type: none"> Check whether the safety regulation setting is correct. Check the voltage of the grid. If the grid voltage exceeds the allowed range of inverter protection parameters, please contact the local grid company to resolve. Check whether the impedance of the AC cable is too high. Replace with a thicker AC cable if that is the case.
Grid Frequency Fault	<ol style="list-style-type: none"> Check whether the safety regulation settings are correct. Check the frequency of the grid. If the grid frequency exceeds the allowed range of inverter protection parameters, please contact the local grid company to resolve.
ISO Over Limitation	<ol style="list-style-type: none"> Check whether the PV panels, cables, and connectors are broken or water leaked. Check whether there is a reliable inverter grounding line.
GFCI Fault	<ol style="list-style-type: none"> The ground current is too high. Check whether the PV cable has a short circuit to ground.
PV Over Voltage	<ol style="list-style-type: none"> Input voltage is too high. Reduce the number of PV panels to make sure the open-circuit voltage of each string is lower than the inverter max allowed input voltage.
Inverter Over Temperature	<ol style="list-style-type: none"> Check whether the inverter is directly exposed to the sunlight. Reduce ambient temperature.
DCI Fault	<ol style="list-style-type: none"> Restart the inverter, wait a moment for inverter recovery. If the fault occurs repeatedly, please contact Sunways.
Bus Voltage Fault	
SCI Fault	
SPI Fault	
E2 Fault	
GFCI Device Fault	
AC Transducer Fault	
Relay Check Fail	
Flash Fault	

7.2 Maintenance

 Danger	<p>Risk of inverter damage or personal injury due to incorrect service! Always keep in mind that the inverter is powered by dual sources: PV strings and utility grid.</p> <p>Before any service work, observe the following procedure.</p> <ol style="list-style-type: none"> 1. Disconnect the AC circuit breaker and then set the DC load-break switch of the inverter to OFF; 2. Wait at least 5 minutes for inner capacitors to discharge completely; 3. Verify that there is no voltage or current before pulling any connector.
 Caution	<p>Keep non-qualified persons away! A temporary warning sign or barrier must be posted to keep non-qualified persons away while performing electrical connection and service work.</p>
 Attention	<p>Restart the inverter only after removing the fault that impairs safety performance. Never arbitrarily replace any internal components. For any maintenance support, please contact Sunways. Otherwise, Sunways shall not be held liable for any damage caused.</p>
 Note	<p>Servicing of the device in accordance with the manual should never be undertaken in the absence of proper tools, test equipment or the latest revision of the manual which has been clearly and thoroughly understood.</p>

Items	Methods	Period
System clean	<p>Check the temperature and dust of the inverter. Clean the inverter enclosure if necessary. Check if the air inlet and outlet are normal. Clean the air inlet and outlet if necessary.</p>	Six months to a year (it depends on the dust contents in air.)

8. Technical Parameters

Model		STS -3KTL	STS -3.6KTL	STS -4.2KTL	STS -4.6KTL ^①	STS -5KTL	STS -6KTL
DC Input	Start-up Voltage (V)	120	120	120	120	120	120
	Max. DC Input Voltage (V)	600	600	600	600	600	600
	Rated DC Input Voltage (V)	360	360	360	360	360	360
	MPPT Voltage Range (V)	100-550	100-550	100-550	100-550	100-550	100-550
	Full power MPPT voltage range (V)	130-500	150-500	180-500	190-500	210-500	250-500
	No. of MPP Trackers	2	2	2	2	2	2
	No. of DC Inputs per MPPT	1/1	1/1	1/1	1/1	1/1	1/1
	Max. Input Current (A)	12.5/12.5	12.5/12.5	12.5/12.5	12.5/12.5	12.5/12.5	12.5/12.5
	Max. Short-circuit Current (A)	15	15	15	15	15	15
backfeed current to the array (A)	0	0	0	0	0	0	
AC Output	Rated Output Power (W)	3000	3600	4200	4600	5000	6000
	Max. Output Power (W)	3300	3960 ^②	4600	4600	5500 ^④	6600
	AC Output Rated Apparent Power (VA)	3000	3600	4200	4600	5000	6000
	Max. Apparent Power (VA)	3300	3960 ^②	4600	4600	5500 ^④	6600
	Rated Output Voltage (V)	220/230	220/230	220/230	220/230	220/230	220/230
	Rated AC Frequency (Hz)	50/60	50/60	50/60	50/60	50/60	50/60
	AC Output Rated Current (A)	13	15.7	18.3	20	21.7	26.1
	Max. Output Current (A)	15	18 ^③	21	21	25 ^⑤	28.7
	The Measured Inrush Current (A)	13.5A@44μs		31.5A@55μs			
	Max. output fault current (A)	50	50	50	50	50	50
	Max. output overcurrent protection (A)	50	50	50	50	50	50
	Power Factor	0.8 leading ...0.8 lagging					
	Max. total harmonic distortion	< 3% @Rated Output Power					
DCI	< 0.5%In						

Note	① : STS-4.6KTL is available for countries using the regulation of VDE4105 only.						
	② : 3680 for G98	③ : 16 for G98	④ : 5000 for Belgium	⑤ : 21.7 for Belgium			

Model		STS -3KTL	STS -3.6KTL	STS -4.2KTL	STS -4.6KTL ^①	STS -5KTL	STS -6KTL
Efficiency	Max. Efficiency	98.1%	98.1%	98.1%	98.1%	98.1%	98.1%
	European Efficiency	97.5%	97.5%	97.5%	97.5%	97.5%	97.5%
	MPPT Efficiency	99.9%	99.9%	99.9%	99.9%	99.9%	99.9%
Protection	DC Reverse Polarity Protection	Integrated					
	Insulation Resistance Protection	Integrated					
	DC Switch	Integrated					
	Surge Protection	Integrated (Type II AC/DC)					
	Over-temperature Protection	Integrated					
	Residual Current Protection	Integrated					
	Islanding Protection	Frequency shift, Integrated					
	AC Short-circuit Protection	Integrated					
	AC Over-voltage Protection	Integrated					
General Data	Dimensions (mm)	410W*360H*120D					
	Weight (kg)	13					
	Protection Degree	IP65					
	Self-consumption at Night (W)	< 1					
	Topology	Transformerless					
	Operating Temperature Range (° C)	-30~60					
	Relative Humidity(%)	0~100					
	Operating Altitude (m)	3000					
	Cooling	Natural Convection					
	Noise Level (dB)	< 25					
	Display	OLED & LED					
	Communication	RS485/WiFi/GPRS/LAN (Optional)					
	Compliance	NB/T32004、IEC62109、IEC62116、VDE4105、VDE0126、UTE C15-712-1、AS4777、C10/11、CEI 0-21、RD1699、NBR16149、IEC61727、IEC60068、IEC61683、EN50549、EN61000					

Sunways

Address: No. 1, Second Road, Green Industrial Zone, Chongshou Town,
Cixi City, ZheJiang Province, PEOPLE'S REPUBLIC OF CHINA

Website: www.sunways-tech.com

Service Mail: service@sunways-tech.com

Hotline: +86 400-9922-958